



EXTENSION CABLES

1. Check the rcd, and any cables, plugs and sockets. Do not use anything found damaged - contact the hire company.



2. Check the rcd, and any cables, plugs and sockets. Do not use anything found damaged - contact the hire company.
3. Check the rcd, and any cables, plugs and sockets. Do not use anything found damaged - contact the hire company.
4. Check the rcd, and any cables, plugs and sockets. Do not use anything found damaged - contact the hire company.

WORKING WITH THE RCD

1. Test the rcd each time you use it.
2. The rcd must be kept away from water and any other Liquids. It should not be knocked or dropped.
3. If your tool stops working while you are using it, turn it off first. Then check to see if the rcd has tripped and cut off power to the tool.
4. Unplug the tool and test the rcd. If the rcd is working properly, plug the tool in again. If the rcd trips, the tool has developed a fault. Do not use it, or attempt to repair it. Contact the hire company.
5. If you think a cable has been damaged, switch off at the supply and unplug before inspecting the cable.
6. If the rcd does not work properly, do not try to repair it. Contact the hire company.
7. You may want to read this leaflet again. Please keep it until you have finished work.

Please keep this leaflet safely as it may be required for reference at a future date



Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE


Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited

©Copyright Hire Association Europe April 2011

Telephone: 44 (0) 121 380 4600
Fax: 44 (0) 121 333 4109
Email: mail@hae.org.uk
website: www.hae.org.uk

Hire Association Europe
2450 Regents Court
The Crescent
Birmingham Business Park
Solithull B37 7YE

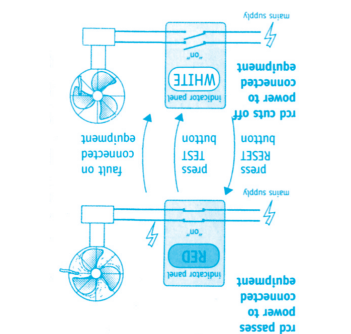

1. The indicator panel on your rcd will show whether it is "switched on" or not.
2. If you press the TEST button the rcd will "trip" and switch off power to the tool or equipment.
3. If the rcd detects a fault on any of the cables or equipment plugged into it, it will trip.
4. You need to press the RESET button before the rcd will pass power again.
5. Some rcds are designed to trip or switch off every time they are unplugged, or when the mains supply to them is switched off. You will need to reset an rcd like this every time you come to use it.

ON or OFF

the tool before you do this - you may need to take special precautions. Start the tool. If the indicator panel and the indicator panel changes to WHITE, then the tool is faulty. Do not use the tool. Contact the hire company.

1. Press the RESET button on the rcd, then plug it into the supply socket.
2. Switch the socket on. The indicator panel on the rcd should be RED or BLACK. If it is changed to WHITE, the supply socket has changed by an electrician. Do not use the rcd. Contact the hire company.
3. Press the TEST button on the rcd. The indicator panel should now be WHITE. If it is not, the rcd is faulty. Do not use the rcd. Contact the hire company.
4. Switch off the socket, unplug the rcd and plug it into the supply socket.
5. Make sure that the tool is switched OFF, then plug it into the rcd.
6. Switch the supply socket on. If the rcd trips, and the indicator panel changes to WHITE, press the TEST button. Do not use the tool. Contact the hire company.
7. As a final check that everything is working properly, you will need to start the tool. Check the safety instructions supplied with the tool.

ON THE BACK

RCDs WITH RESET BUTTON

the tool before you do this - you may need to take special precautions. Start the tool. If the indicator panel and the indicator panel changes to WHITE, then the tool is faulty. Do not use the tool. Contact the hire company.

R.C.D. Residual Current Device

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read all of this leaflet BEFORE you use residual current device or "rcd".

1. A residual current device or rcd is an electronic device that plugs into your electricity supply socket. It can help prevent you getting a serious electric shock if a fault develops on the mains cables or machine case.
2. The rcd will only protect equipment that is plugged into it.
3. Electricity can be hazardous and must always be used with great care. You must never take risks, even with rcd protection. Do not assume that the rcd will always protect you - for example you can still get a shock if you cut into a live cable in a wall. Do not do anything that you would not have done without the rcd.
4. Plan your work and think ahead to make sure you will always be working safely.
5. Your rcd may be a plug-in adaptor, an in-line type with plug and socket attached by short cables, or a freestanding unit. These safety instructions apply to all types.
6. This rcd must not be used by minors, or by anyone under the influence of drugs or alcohol.
7. This machine is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.



Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting material is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability perceived to have arisen from the use of any such document/material. Only Acts of Parliament and Statutory Instruments have the force of law and only the courts can authoritatively interpret the law.

1. Plug the rcd into the supply socket, and switch the socket on.
2. Press the RESET button. The indicator panel on the rcd should be RED or BLACK. If it has remained at WHITE, plug the rcd into another socket, and press the reset button again. If the indicator panel turns to RED or BLACK, then the first supply socket may be faulty. Do not use the faulty socket - get it checked by an electrician. If the indicator panel remains white, the rcd is probably faulty. Do not use the rcd. Contact the hire company.
3. Press the TEST button on the rcd. The indicator panel should now be WHITE. If it is not, the rcd is faulty. Do not use the rcd. Contact the hire company.
4. Make sure that the tool is switched OFF then plug it into the rcd. Do not start the tool.
5. Press the RESET button on the rcd. If you cannot RESET the rcd, and the indicator panel remains WHITE, the tool is faulty. Do not use the tool. Contact the hire company.
6. As a final check that everything is working properly, you will need to start the tool. Check the safety instructions supplied with the tool before you do this - you may need to take special precautions. Start the tool. If the rcd trips, and the indicator panel changes to WHITE, then the tool is faulty. Do not use the tool. Contact the hire company.
7. As a final check that everything is working properly, you cannot get at the RESET button when the rcd is plugged in.

Check the tool you plan to use

1. Press the TEST button on the rcd. The indicator panel should now be WHITE. If it is not, the rcd is faulty. Do not use the rcd. Contact the hire company.
2. Switch the socket on. The indicator panel on the rcd should be RED or BLACK. If it is changed to WHITE, the supply socket has changed by an electrician. Do not use the rcd. Contact the hire company.
3. Press the TEST button on the rcd. The indicator panel should now be WHITE. If it is not, the rcd is faulty. Do not use the rcd. Contact the hire company.
4. Make sure that the tool is switched OFF then plug it into the rcd. Do not start the tool.
5. Press the RESET button on the rcd. If you cannot RESET the rcd, and the indicator panel remains WHITE, the tool is faulty. Do not use the tool. Contact the hire company.
6. As a final check that everything is working properly, you will need to start the tool. Check the safety instructions supplied with the tool before you do this - you may need to take special precautions. Start the tool. If the rcd trips, and the indicator panel changes to WHITE, then the tool is faulty. Do not use the tool. Contact the hire company.
7. As a final check that everything is working properly, you cannot get at the RESET button when the rcd is plugged in.



RCDs WITH RESET BUTTON ON THE FRONT

1. There are two sets of instructions, for different sorts of rcd. Make sure that you read the correct instructions for your rcd.
2. You must check that the rcd works before you begin any job. Follow the instructions below. This will also test the supply socket and the tool you are using.
3. Do each test in order, this will mean the rcd and equipment is ready for the next test. If any of the tests show that equipment is faulty, do not continue with the remaining tests until the fault has been put right.
4. There are two sets of instructions, for different sorts of rcd. Make sure that you read the correct instructions for your rcd.
5. Press the RESET button on the rcd. The indicator panel on the rcd should be RED or BLACK. If it has remained at WHITE, plug the rcd into another socket, and press the reset button again. If the indicator panel turns to RED or BLACK, then the first supply socket may be faulty. Do not use the faulty socket - get it checked by an electrician. If the indicator panel remains white, the rcd is probably faulty. Do not use the rcd. Contact the hire company.
6. As a final check that everything is working properly, you will need to start the tool. Check the safety instructions supplied with the tool before you do this - you may need to take special precautions. Start the tool. If the rcd trips, and the indicator panel changes to WHITE, then the tool is faulty. Do not use the tool. Contact the hire company.
7. As a final check that everything is working properly, you cannot get at the RESET button when the rcd is plugged in.



Before Starting Work...