



0901 Safety Guidance



Using the Wallpaper Stripper

- Wear your gloves
- Each section of wallpaper treated will be very hot. Take care while handling it.
- Switch off and remove the plug then allow the equipment to cool down completely before refilling.
- Always place the boiler unit on a heat resistant drip tray and not on a decorative surface. Make sure the steam plate is placed on a heat resistant drip tray when not
- The part that stays hot longest is the filler cap. Allow it to cool then remove it carefully with a protective glove or cloth. Remove it in stages, allowing any pressure to release slowly.
- Keep the cable clear of any sharp edges in your work area.
- If you think the cable may be cut or damaged in any way, switch off and unplug at the mains before inspecting it. If the cable attached to the wallpaper stripper is damaged, stop using the equipment. Contact the hire company. If an extension cable has been damaged, do not use it again.
- Take care not to accidentally pull the plug from the socket.
- Switch off and remove the plug from the socket then allow the equipment to cool down before leaving unattended.
- 10. Switch off and remove the plug then allow the equipment to cool down completely
- 11. If your equipment does not work properly do not attempt to repair it. Contact the hire company.
- 12. You may want to read this leaflet again. Please keep it until you finish work. Please keep this leaflet safely as it may be required for future reference







2450 Regents Court

The Crescent







44 (0) 121 333 4109



Any unauthorised reproduction – manually or electronically – is STRICTLY prohibited



are dry and sate. that anue 2. Make

will overneat and could run over it. Unroll it fully or it

pe frapped, and places where vehicles might adges, doorways or windows where it might 4. Lay it out carefully avoiding liquids, sharp rne rca.

than 50 metres (160 feet). Plug it directly into a suitably rated heavy duty one, not longer any special instructions, you should only use company. If the hire company have not given sbecisl justinctions given by the hire 3. If you need an extension cable, follow any

according to the instructions supplied with it. working each time you use it. Heset the red 2. Use the "TEST" button to check that the rcd is



sable or equipment get against electric shock if the will pelp to protect you equipment into the rcd. This

directly in to the 230 voit socket. Plug your 1. Use a residual current device ("rcd") plugged

(SQUARE PIN OR BLUE PLUG) 230 VOLT HEATERS

connections are dry and sate. 4 Make sure that any extension cable

will overheat and could catch fire. vehicles might run over it. Unroll it fully or it where it might be trapped, and places where ildnids, snarp edges, doorways or windows 3. Lay the extension cable out carefully avoiding

between the transformer and the equipment. tou must only use an extension cable cable, not longer than 50 metres (160 feet). any special instructions, you should only use a suitably rated heavy duty 110v extension company. If the hire company have not given any special instructions given by the hire 2. If you need to use an extension cable, follow 230v extension cables.



530volt socket. Do not use any transformer directly into the transformer, 6njd 7. If you are using a portable of the

110 VOLT HEATERS (YELLOW PLUG)

instructions below for your equipment. pin plug fitted or a blue industrial plug. Read the 230v equipment will have either a normal square

I TOV equipment will have a yellow industrial plug it will be 100v or 230v.

Your equipment will only operate on one voltage:

ELECTRICAL SAFETY

SOCKETS OF SWITCHES. Do not use the steam plate near electrical use this water again. from the steam plate into it regularly. Do not

fill with water from the steam. Keep a bucket or container handy and empty the water During use the steam concentrator plate will

areily hor steam plate down when not in Use a heat resistant drip tray where you can амау пот уоц.

concentrator plate will splutter hot water from the steam holes. Keep the steam plate As the water heats up the

STEAM PLATE













Wallpaper Stripper

The rules and procedures in force where people are at work may require the person responsible for this equipment to carry out a specific risk assessment.

It is important to read all of this leaflet **BEFORE** you use the Wallpaper Stripper

- Plan your work and think ahead to make sure you will always be working safely.
- Electricity is dangerous and must always be used with great
- Electricity and water make a hazardous combination. Keep electrical parts away from rain and water.
- Steam will scaled or burn instantly; take great care.
- This wallpaper stripper is designed to remove all types of wallpaper, including emulsioned or washable paper
- The action of this wallpaper stripper can cause injury or damage if the equipment is no used in a careful and controlled way.
- If you have not used a wallpaper stripper before, familiarise yourself with the equipment on some straightforward work before starting on the main task.
- You should have at least the following items of personal protective equipment: Heavy duty waterproof gloves; Rcd if using a 230 volt (mains) supply.
- This equipment must not be used by minors, or by anyone under the influence of drugs or
- This wallpaper stripper is designed for operation by an able bodied adult. Anyone with either temporary or permanent disability must seek expert advice before using it.













Every effort has been made by HAE/EHA to ensure that the information given in this document and supporting materia is accurate and not misleading. HAE/EHA cannot accept responsibility for any loss or liability pero-nave arisen from the use of any such document/material. Only Acts of Parliament and Statutory Ins from the use of any such document/material. Only Acts of Parliament and Statu have the force of law and only the courts can authoritatively interpret the law.

44 (0) 121 380 4600

The Crescent Birmingham Business Park noo sinegen uch

BAY 788 Iludilos



you must know now to stop it. subaper stripper on, Check on how the on/off switch operates.

Do not tonch electrical switches or plugs

allowing pressure to release slowly. Use a and allow to cool then remove cap carefully equipment is operating and hot. Shut off Do not remove the filler cap while the

nuiess specifically recommended by the hire vater only. Additives should not be used Fill the tank up to the level mark with clean

Before starting, ensure all hose connections

or a blue industrial plug. designed to run directly from 230v mains will have either a normal square pin plug fitted, eavier than you think. Inemqiup3 has been supplied, rake care not to injure yourself when moving it about it may be mains 230v supply. If a portable transformer to power the equipment from a normal provided a portable transformer if you nee plug fitted is designed to run off a special 110v supply. The hire company will have Equipment with a cylindrical yellow industrial

connections or improvise them. matches your supply. Do not try to force Check that the plug on your equipment

couract the hire company. damaged, do not use the wallpaper stripper: nose and plate. If anything is found Check your equipment, cables, plugs steam

WALLPAPER STRIPPER

You should wear heavy-duty waterproof brotection. environments may require a higher level of

should be worn wherever you use this equipment. Particular jobs or ednibment (ppe) are the minimum that The following items of personal protective **SHOTARING**

ventilation and remove excessive moisture. Open doors or windows to improve place it on a near resistant onp tray.

quibe of hot water may cause damage floors or other finish surfaces, the heat or Do not stand the boiler unit on decorative

carpets, furnishings and floors. Move or protect furniture, hot water dripping from the steam plate will damage

is very suppery. keep your work area clean; wet wallpaper

others to keep away. Put up warning signs. Protect other people from the steam. Warn

distract you. Keep children and animals Make sure that the area is clear and safe

plate would scald your face or hands. overhead work - the drips form the steam no uor nee ruis ednibuieur ou ceiliugs or ior

tumes from petrol, or gas cylinder. there is a danger of explosion. It will ignite Do not use this wallpaper stripper where

> **MORK AREA** Before Starting Work

